


82–820 Removal and installation of pushbutton switch for seat heating system and renewing bulb



Removing pushbutton switch

- 1 Push switch (18) out of cover molding (17).
- 2 Separate switch from harness at couplers.

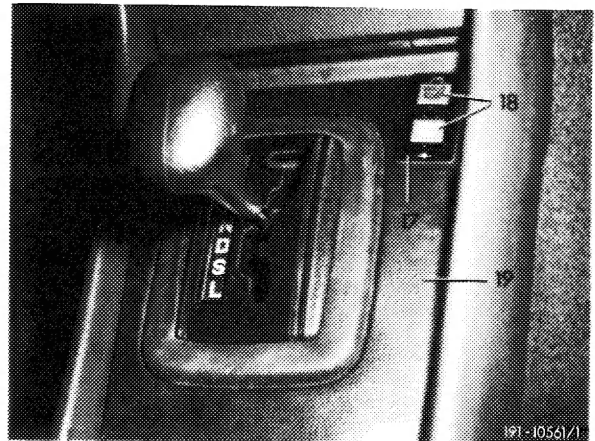

Renewing bulb (on 1st version only)

- 3 Carefully push off pushbutton on both sides in upward direction.
- 4 Pull bulb out of central interlock e. g. by means of a rubber hose.

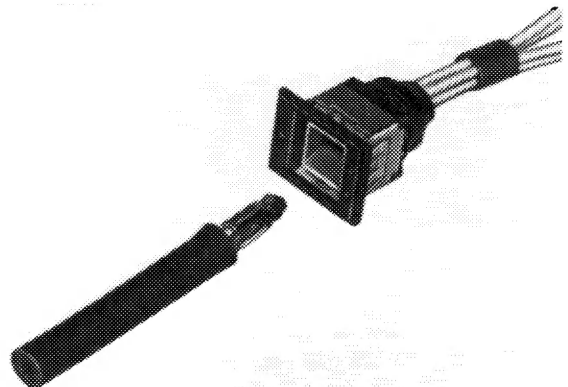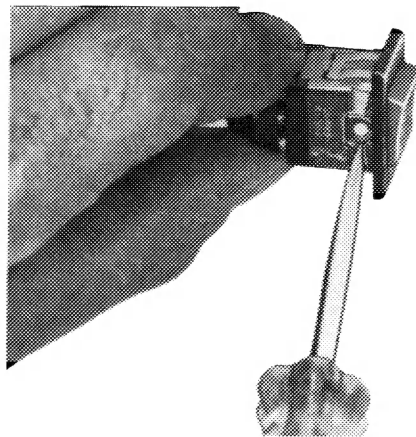

5 Push in new bulb.

6 Press pushbutton on again.

Installing pushbutton switch

7 For installation proceed vice versa.

Note: When connecting switch to harness, couplers having the same color must be plugged together.

On switches of 2nd version, the bulb cannot be replaced. If bulb is not lighting up, replace complete switch.